

Your Package contains:

1 Installation CD

1 Fluids Compilation CD

1 USB Key

1 user manual

Installing PIPE-FLO® Software

****Note for upgrade customers****

Install your software only during our regular support hours of Monday – Friday 7:30am – 4:30pm Pacific US Time. Outside of these hours we will not be able to issue license update codes. Without the update codes your new version of PIPE-FLO will not run.

The PIPE-FLO setup must be run on each computer using the supplied setup program. **Due to increased Windows security, administrator rights are required to install under Windows 2000, XP and Vista. Contact your system administrator if you do not have these rights.**

1. Place the Program CD into the drive or if you downloaded the program click the folder you created on our desktop. ***Remove USB Keys before installing***
 2. Run the program SETUP.EXE and follow the installation prompts that appear on your screen.
- Enter your Serial Number: The serial number (ending in 2 letters) is found on your software package. ***If upgrading from version 2005 use your serial number from that version* previous versions will be issued a new serial number.**
 - Accept the Program License Agreement.
 - Enter a Destination Path: Users are encouraged to install to the default path. Updates from previous versions default to the existing software path.
3. The Setup program will install all required files to your computer. It will also add the PIPE-FLO program group to your Start Menu with links to start the program and to view program manuals. After the installation completes attach the USB key.

Note: If your computer fails to find the verification key you will need to manually run the SETUP found on the CD or downloaded PIPE-FLO folder in the Key Driver folder. To install the Key Driver you will need to have administrator privileges on your computer.

Upgrade from previous version only

UPDATING OF YOUR PIPE-FLO HARDWARE KEY

Updating the PIPE-FLO hardware key requires an exchange of activation codes with Engineered Software. First you generate an identification code on your PC and email it to unlock@eng-software.com. That code is then used to generate the second code needed to update your key to the new version of PIPE-FLO.

Follow these steps to generate the code to send to Engineered Software to update your hardware key.

1. Make sure the key is attached to your computer (USB or Parallel Port depending on the type of key you requested).
2. Click the windows START button then browse to programs\PIPE-FLO\Tools & Links click the Licensing program to launch the Field Exchange Utility
3. Click the GET LOCKING CODE button. A long alphabetic code will appear in the edit box above the button.
4. Highlight the text, right click with your mouse and select copy.
5. Create an email message addressed to email address above. In the subject line enter your product serial number and company followed by PIPE-FLO Key Update.
6. At the top of the message body right click your mouse and select paste to insert the code into the email message. Then send the email message. You will receive an unlock code with instructions via return email message.